



NETWORK MEDIA PLAYER

For more information and technical support services, please visit us at www.ceenee.com



Manufactured under license under U.S. Patent #'s: 5,451,942; 5,956,674; 5,974,380; 5,978,762; 6,487,535 & other U.S. and worldwide patents issued & pending. DTS and the Symbol are registered trademarks, & DTS 2.0+Digital Out and the DTS logos are trademarks of DTS, Inc. Product includes software. © DTS, Inc. All Rights Reserved.

 


Manufactured under license from Dolby Laboratories. "Dolby" and the double-D symbol are trademarks of Dolby Laboratories.




HDMI, the HDMI logo and High-Definition Multimedia Interface are trademarks or registered trademarks of HDMI Licensing LLC.


Package Contents:

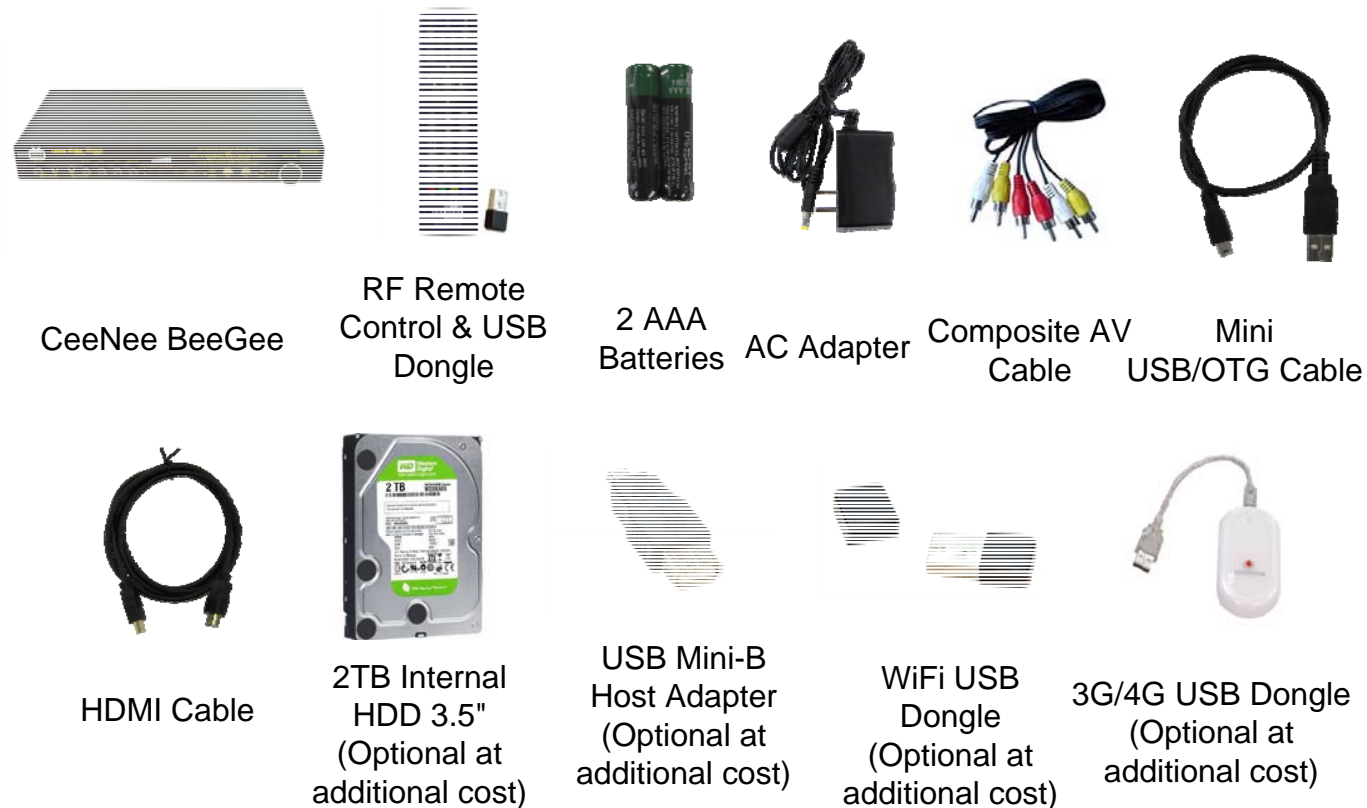

 - 6** To install the internal hard drive, please follow the procedure:
- 1) Make sure the connector is at the bottom
 - 2) Slowly push the hard drive in
 - 3) When the drive is about 1 inch sticking out, push the bracket until you hear a clicking sound.

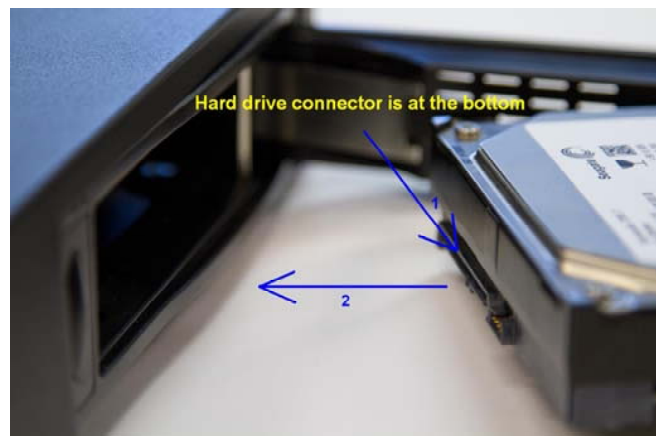

 - 1** Connect your CeeNee BeeGee to the TV set using the HDMI cable or Composite AV cable or Component cable

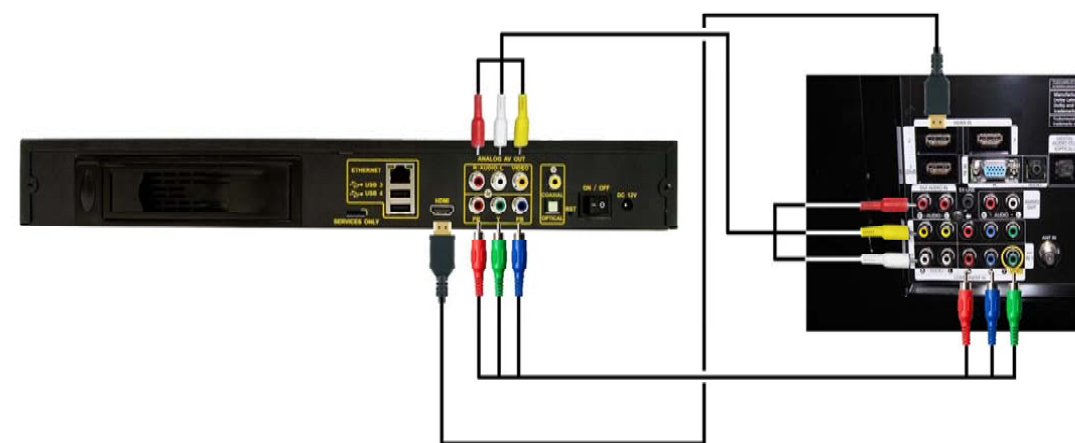

*Users can use all three connections or only one if desired




- 2 To connect the player to the Internet/Network:
- Connect the Ethernet cable (not included) to Ethernet connector
 - Or connect an optional WiFi USB dongle to the USB connector
 - Or connect an optional 3G/4G USB dongle to the USB connector



- 4 Connect the AC adapter to the wall unit and to CeeNee BeeGee and turn the switch to ON



- 3 Connect the Red and White of Composite cable between A/V port to TV
To use the optical digital sound, connect the optical cable and/or the coaxial cable from the player to amplifier

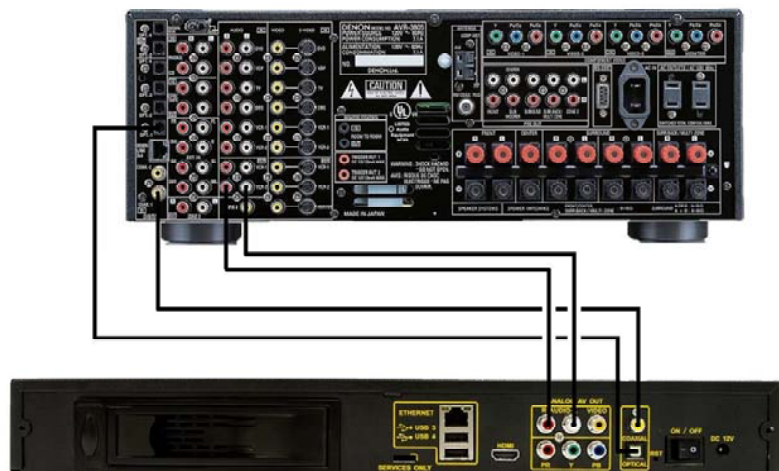

- 5 Connect USB Hard Drive, and/or SD card, and/or USB Flash drive to CeeNee BeeGee
* USB Hard Drive, SD card, and USB Flash drive are not included.
** An optional USB Mini-B Host Cable is not included.

